


# Salvajor Collectors

## PARTS BREAKDOWN


### Scrap Collector Components

For models with serial numbers beginning with No. 9292

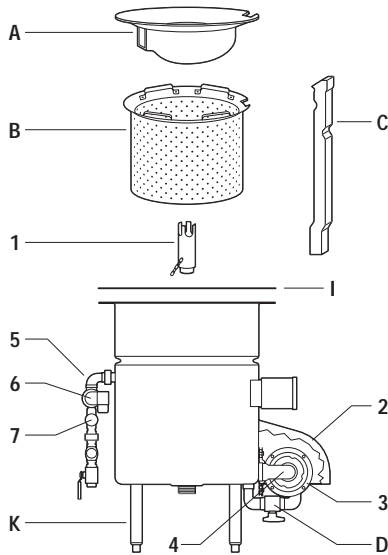


### Pot/Pan Collector Components

For models with serial numbers beginning with No. 3013

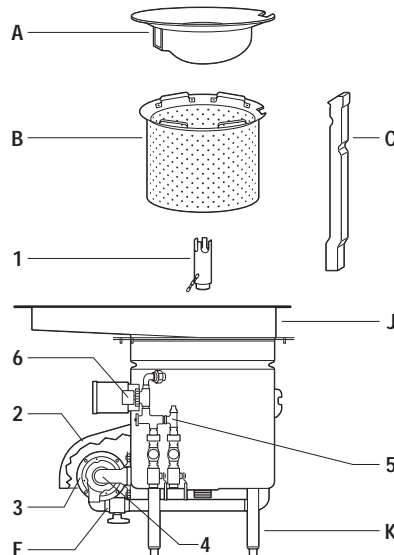


### Trough Collector Components

For models with serial numbers beginning with No. 4311

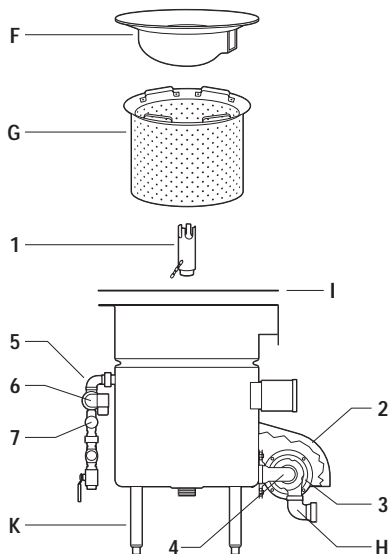


### Control Panel

All Models

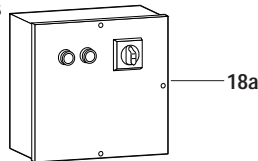

### Pump & Motor Assembly

(For all three Collectors)

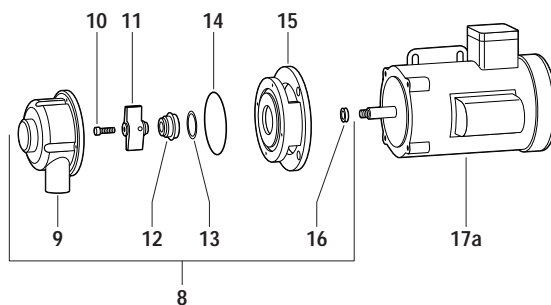

ITEM	PART NO.	DESCRIPTION
A	992010	Salvage Basin w/cut out
B	992012	Scrap Basket w/cut out
C	993002	Gusher Tube
D	S914FCA	Pump Valve Assembly (Scrap Collector)
E	P914FCA	Pump Valve Assembly (Pot & Pan Collector)
F	992011	Salvage Basin
G	992013	Scrap Basket
H	996019	Pump Discharge Elbow
I	91431	Flange Gasket
J	992048	Pot/Pan Adaptor
K	914 LESS	Leg Assembly
1	988006	2" Diameter Overflow Pipe
2	992040	Service Cover
3a	980076	Pump & 1-Phase Motor Assembly (includes items 8,17)
3b	980077	Pump & 3-Phase Motor Assembly (not shown, includes items 8, 17)
4	996034	Pump Intake Elbow
5	980002	Water Harness (includes items 6-7)
6a	GP4242	Solenoid Valve: 24V
6b	GP41152	Solenoid Valve: 115V (not shown)
6c	GP42082	Solenoid Valve: 208V (not shown)
6d	GP44602	Solenoid Valve: 460V (not shown)
7	998024	Tempering Valve (Replacement kit #998028)
8	980074	Pump Assembly (includes items 9-16)
9	988010	Pump Housing
10	997089	Cap Screw (not used on 1-Phase)
11	996027	Impeller
12	ECK511	Seal Kit
13	996047	Washer
14	996028	O-Ring
15	988009	Pump Base
16	996030	V-Ring
17a	991060	Pump Motor 1-Phase
17b	991061	Pump Motor 3-Phase (not shown)
18a	SS334	115V, 1-Phase Control Panel
18b	SS335	208-240V, 1-Phase Control Panel
18c	SS337	208-240V, 3-Phase Control Panel
18d	SS339	460V, 3-Phase Control Panel



The Salvajor Company

4530 East 75th Terrace  
 Kansas City, MO 64132-2081  
 1-888-SALVAJOR FAX 1-800-832-9373  
 service@salvajor.com