



Salvajor ScrapMaster

Model SM


“HOW IT WORKS”

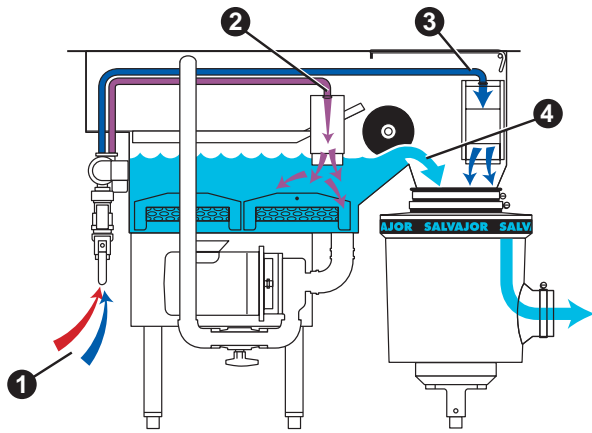

- 1 When the ScrapMaster is first turned on, hot and cold water pass through a water blender set at 107° F.
- 2 The blended water enters the tank at the rate of 5 gallons per minute.
- 3 Cold water is introduced directly into the disposer grind chamber at the rate of 2 gallons per minute.
- 4 The water level in the tank reservoir rises until it overflows into the disposer at the rate of 5 gallons per minute.

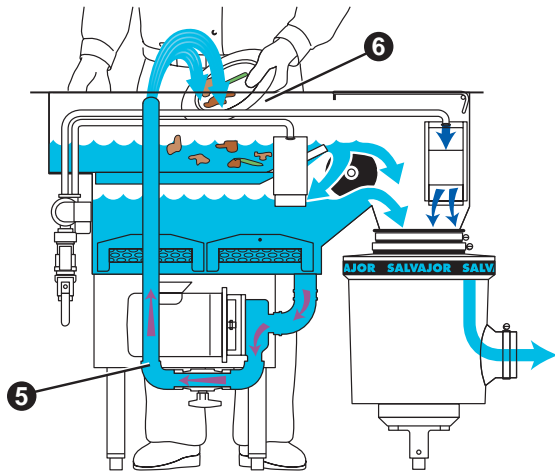

- 5 When the tank reservoir holds sufficient water, the ScrapMaster pump begins circulating water through the gusher tube.
- 6 As dishes are passed through the water plume, they are scrapped and pre-rinsed at the same time.

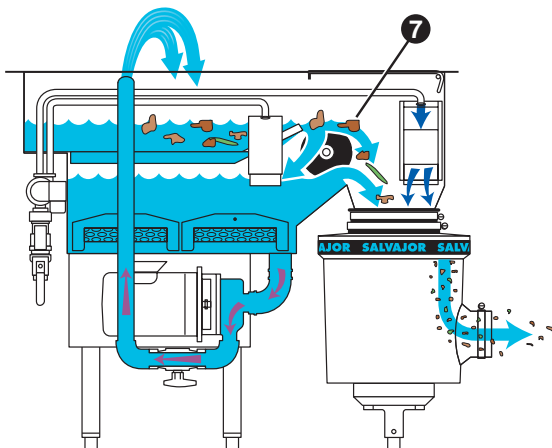

- 7 Food waste is flushed directly into the scrap basin and carried by the water toward the revolving separator disks. Water falls through the disks and returns to the tank reservoir. The waste is carried over the disks into the disposer for grinding.


(See other side for the Pot/Pan Scrapmaster)




Salvajor Pot/Pan ScrapMaster

Model PSM


“HOW IT WORKS”

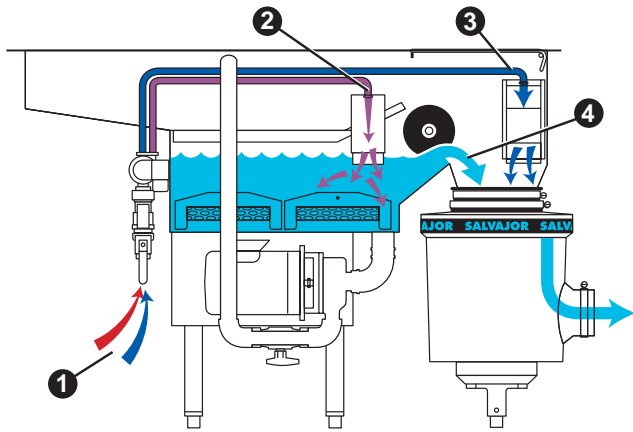

- 1 When the ScrapMaster is first turned on, hot and cold water pass through a water blender set at 107° F.
- 2 The blended water enters the tank at the rate of 5 gallons per minute.
- 3 Cold water is introduced directly into the disposer grind chamber at the rate of 2 gallons per minute.
- 4 The water level in the tank reservoir rises until it overflows into the disposer at the rate of 5 gallons per minute.

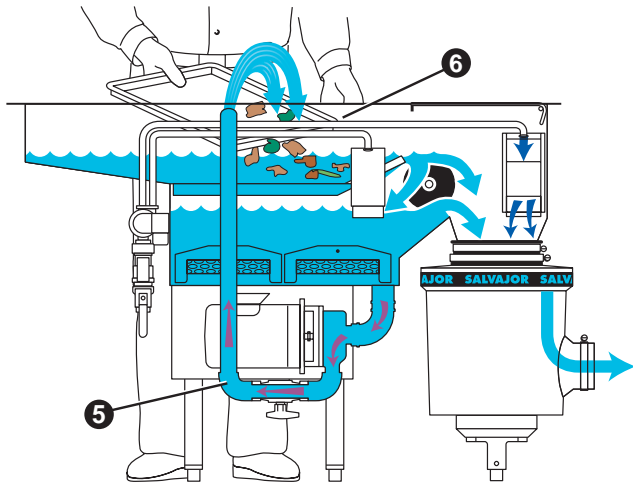

- 5 When the tank reservoir holds sufficient water, the ScrapMaster pump begins circulating water through the gusher tube.
- 6 Pots and pans may be passed through the water plume or placed in the scrap basin to be scrapped and pre-rinsed.

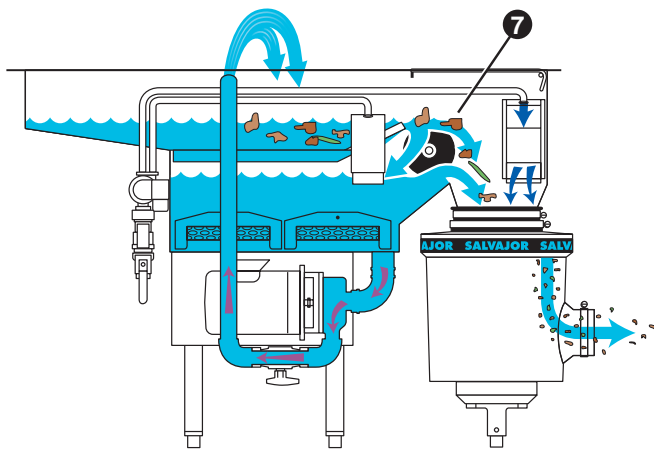

- 7 Food waste is flushed directly into the scrap basin and carried by the water toward the revolving separator disks. Water falls through the disks and returns to the tank reservoir. The waste is carried over the disks into the disposer for grinding.

(See other side for the Scrapmaster)



The Salvajor Company 4530 East 75th Terrace Kansas City, Missouri 64132-2081, USA

1-800-821-3136

(816) 363-1030

FAX: 1-800-832-9373

www.salvajor.com

Email: sales@salvajor.com

service@salvajor.com

Manufacturers of Commercial Food Waste Disposing Systems since 1944